



## Delta Universal Remote Control



## OVERVIEW

The UEI Delta universal remote is designed to work with the Digital Transport Adapter (Digital Adapter) supplied by your Cable Provider. This remote is designed to operate all of the features and functions of the Digital Adapter and is programmable to operate the Volume and Power of your TV.

The remote control requires installing two (2) new AA batteries (included) and simple programming instructions to control your TV. For best results, please read and perform all instructions listed here. Also, keep this guide for future reference.

## INSTALLING BATTERIES

- Pull back the remote control's battery cover and remove it.
- Insert the two (2) supplied AA batteries according to the + and - marks in the battery case.
- Push the battery cover back into place.
- Test the unit by pressing the power key.

If batteries are inserted correctly, the Red Light will blink.

NOTE: When batteries need replacement, the remote control will stop operating. Replace the old batteries within 15 minutes and the unit will be restored to its full functionality.

## FEATURES AND FUNCTIONS

Use the remote control's keys to perform actions described below (see the following key chart).

	When a valid TV code is programmed the <b>POWER</b> key will turn on or off the TV.
	Use <b>SET</b> for all programming sequences.
	Use <b>INFO</b> to display current channel information.
	Use the keypad (0 ~ 9) to directly select the channels (e.g., 09 or 031).
	Use <b>ENTER</b> to directly tune to a channel (e.g., 1-0-9 Enter).
	Use <b>LAST</b> to recall the last channel.
	Use <b>LANG</b> to switch between different languages and audio options, when available on the Digital Adapter.
	Use <b>CH+</b> (or <b>CH-</b> ) to select the next higher (or lower) channel.
	Use <b>VOL+</b> (or <b>VOL-</b> ) to raise (or lower) the sound volume on the Digital Adapter. When a valid TV code is programmed these keys will operate the TV's volume control.
	Press <b>MUTE</b> once to turn sound off or on.

## PROGRAMMING TV CONTROL

The UEI Delta remote control is pre-programmed at the factory to operate the Digital Adapter. The UEI Delta remote also contains a universal TV library to allow you to control the Power and Volume of your TV.

- Turn on the TV

NOTE: Please read steps 2 to 4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.

- Press and hold **SET** until the **Red Light** blinks twice, then release **SET**.
- Locate the code for your device in Manufacturer's Codes on the back of this user guide. Brands are listed in alphabetical order with the most popular codes listed first.

- Enter the first five-digit code for your TV. If you perform this procedure correctly, the **Red Light** will blink twice

NOTE: If you enter an invalid code, the red light will display one long blink and exit the programming mode. Repeat steps 2 to 5 with a valid code.

- Aim the remote control at your TV and press **Power** once. The device should turn off. If it does not respond, repeat steps 2 to 4, trying each code listed for your brand until you find one that works. If it still does not work, try Searching For Your Code.

- For future reference, write your TV code below:

**TV Code:**

## SEARCHING FOR YOUR CODE

If your brand of TV does not respond to the remote control after trying all of the codes listed, or if your brand is not listed at all, try searching for your code.

- Turn on your TV.
- Press and hold **SET** until the **Red Light** blinks twice, then release **SET**.
- Enter in **9 - 9 - 1**. The **Red Light** will blink twice.

- While pointing the remote control at the TV and press and release the **CH +** key until the TV turns off. (Note: You may need to press [**CH+**] numerous times).

NOTE: In the search mode, the remote control will send IR codes from its library to the TV.

- Press **SET** once to lock in the code. The **Red Light** will blink twice.

## CHECKING THE CODES

If you have set up the remote control using the Searching For Your Code procedure, you may need to find out which five-digit code is operating your TV. Perform the following steps after setting up your TV to find out which five-digit code operates your TV.

- Turn on the TV

**NOTE:** Please read steps 2 to 4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.

- Enter in **9 - 9 - 0**. The **Red Light** will blink twice.

To view the code for the first digit, press **1** once. Wait 3 seconds and count the number of times the **Red Light** blinks (e.g., 3 blinks = 3) and write down the number in the left most TV Code box (at end of this section).

NOTE: If a code digit is "0" the red light will not blink.

- Repeat step 3 four more times for the remaining digits. Use **2** for the second digit, **3** for the third digit, **4** for the fourth digit and **5** for the fifth digit. Finish writing down the code in the TV Code boxes (at end of this section).

NOTE: If you enter an invalid code, the red light will display one long blink and exit the programming mode. Repeat steps 2 to 5 with a valid code.

**TV Code:**

## CHANGING VOLUME LOCK

The UEI Delta remote is set to control the volume level of the Digital Adapter. Once a valid TV code is programmed the volume keys will operate the volume of the TV.

However, you may change the Volume Lock setting to regain volume control of the Digital Adapter as follows:

## Changing Volume Lock from TV to the Digital Adapter :

- Press and hold **SET** until the **Red Light** blinks twice, then release **SET**.
- Enter in **9 - 9 - 3** (The **Red Light** will blink twice after the 3).
- Press and release the digit **1** (The **Red Light** will blink 4 times after the 1).

## Changing Volume Lock from Digital Adapter to the TV:

- Press and hold **SET** until the **Red Light** blinks twice, then release **SET**.
- Enter in **9 - 9 - 3** (The **Red Light** will blink twice after the 3).
- Note: If a valid TV code is not programmed the **Red Light** will display one long blink.
- Press and release the digit **2** (The **Red Light** will blink 2 times after the 2).

## TROUBLESHOOTING

PROBLEM:	During programming, the Red Light displays one long blink.	GE	10047, 10051, 10451, 10178, 10021, 1027, 10029, 10055, 10135, 10279, 10282, 10747, 11907, 11919, 11922
SOLUTION:	An invalid entry has occurred. Check the key to be entered and try programming again.	Brookwood	10019
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Broksonic	10236, 10463
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Bush	10355
PROBLEM:	When using the volume lock sequence or code verification, the Red Light displays one long blink.	Bydsign	11309
SOLUTION:	The long blink indicates that a valid TV code has not been programmed.	Cadia	11283
PROBLEM:	The audio output on the TV is not in the right language.	Candle	10030, 10046, 10056, 10186
SOLUTION:	Press the Language (LANG) key to change the audio option back to the preferred language.	Canon	10793, 11396
PROBLEM:	When using the volume lock sequence or code verification, the Red Light displays one long blink.	Carnivale	10030
SOLUTION:	The long blink indicates that a valid TV code has not been programmed.	Carver	10054, 10170
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Casio	10611, 11205
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	CCE	10217, 10329
PROBLEM:	When using the volume lock sequence or code verification, the Red Light displays one long blink.	Celebrity	10000
SOLUTION:	The long blink indicates that a valid TV code has not been programmed.	Celera	10765
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Changhong	10765
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Cinego	11986
PROBLEM:	When using the volume lock sequence or code verification, the Red Light displays one long blink.	Citizen	10060, 10030, 10092, 10046, 10056, 10186, 10280, 10561, 11669, 11671, 11672, 11928, 11935
SOLUTION:	The long blink indicates that a valid TV code has not been programmed.	Clarion	10180
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Classic	11984
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Coby	12017
PROBLEM:	When using the volume lock sequence or code verification, the Red Light displays one long blink.	Commercial Solutions	10047
SOLUTION:	The long blink indicates that a valid TV code has not been programmed.	Compaq	10749
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Concerto	10056
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Contec	10180
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Craig	10180
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Crosley	10054
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Crown	10180
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Curtis Matthes	10047, 10054, 10154, 10451, 10093, 10060, 10072, 10030, 10145, 10166, 10016, 10506, 10466, 10747, 11919
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	CXG	10180
SOLUTION:	Press the Language (LANG) key to change the audio option back to the preferred language.	CyberHome	10794
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Cytron	11326, 12003
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Daewoo	10451, 10092, 10019, 10066, 10067, 10091, 10661, 10672, 11909, 11928
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Daytron	10019
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Dell	11264, 11080, 11178, 11403
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Delta	11369
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Denon	10145, 10511
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Diamond Vision	11801, 11996
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Digital	11565
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Digital Lifestyles	11765, 11822
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Digital Projection Inc.	11482, 11725, 11726, 11750
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Dream Vision	11297
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Dumont	10017
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Durabrand	10463, 10180, 10178, 10171, 11034, 10003
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Dwin	10093, 10720, 10747, 10774
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Dynatech	10049
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Dynex	11463, 11780, 11785
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Earon	10179, 10183, 10216
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Alaron	10183, 10216
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Albatron	10843
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Ambassador	10177
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	America Action	10180
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Ampro	10751
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Anam	10180
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Anam National	10055
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	AOC	10030
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Aomni	11623
PROBLEM:	The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.	Apex Digital	10156, 10748, 10879, 10765, 10890, 11217, 11991
SOLUTION:	Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.	Archer	10003
PROBLEM:	The Red Light blinks when you press a key, but		



## TV CODES CONTINUED

Provieu	10835, 11687
Pvision	11222
Pulsar	10017, 10019
Punet	11546
Pvision	11222
Quasar	10250, 10051, 10055, 10165, 10219, 11919
RCA	10047, 12002, 11953, 11948, 11922, 11919, 11907, 11781, 10747, 10278, 10254, 10135, 10090, 10038, 10029, 10019, 10018
Realistic	10154, 10180, 10178, 10030, 10019, 10032, 10056, 10165
RevolutionHD	11623
Rhapsody	10183, 10216
Runco	10017, 10030, 10497, 10612, 11398, 11629
Sampo	11755, 10030, 10032, 10052, 10100, 10110, 11597
Samsung	10812, 10060, 10702, 10178, 10030, 11959, 11632, 11575, 11060, 10814, 10766, 10587, 10482, 10427, 10408, 10329, 10217, 10056, 10032, 10019
Sansui	10463, 11409, 11904, 11911, 11935
Sanyo	10154, 10088, 10146, 10159, 10232, 10484, 10735, 10798, 10799, 11907
Sceptre	10878, 11217, 11360, 11599
Scimitsu	10019
Scotch	10178
Scott	10236, 10180, 10178, 10019, 10179, 10309, 11711
Sears	10047, 10054, 10154, 10156, 10178, 10171, 10015, 10056, 10146, 10149, 10159, 10168, 10179, 10747, 11007, 11904
Selec	10737, 11297
Sharp	10093, 10153, 10165, 10398, 10491, 10851
Sharper Image	11950
Sheng Chia	10093
Sherwood	11399
Shogun	10019
Signature	10016
Signet	10800, 10844, 11262
SIM2 Multimedia	11297
Simpson	10186, 10187
Skyworth	11799
Solarism	11220
Sole	10813, 11031, 11366, 11377, 11483, 11530, 11623, 12075, 12076
Sony	10000, 10011, 10273, 10353, 10834, 11317, 11400, 11685, 11786, 11791, 11904, 11925
Soundesign	10180, 10178, 10179, 10186
Sova	11320, 11952
Soyo	11546, 11746, 11824, 11826, 11828, 11830, 11831
Spectronicon	10003, 10137
Spectroniq	11687
Squareview	10171
SSS	10180, 10019
Starlite	10180
Studio Experience	10843
SunBrite	11420, 11435
Superscan	10093, 10864
Supre-Macy	10046
Supreme	10000
SVA	10748, 10587, 10768, 10865, 10871, 10872
Sylvania	11864, 10054, 10030, 10171, 10020, 10028, 10065, 10096, 11314, 11665, 11963
Symphonic	10180, 10171, 11904, 11913
Syntax	11610, 11144, 11240
Tandy	10093, 10218

## LCD TV'S

Accurian	11803
Action	10873
Akai	11675, 11676, 11688, 11689, 11692, 11935
AOC	11365
Aomni	11623
Apex Digital	10890, 11217
Astar	11531, 11738
Audiovox	10180, 10802, 10846, 10875, 11284, 11951, 11952
BenQ	11315
Byd:sign	11309
Cadia	11283
Casio	11205
Citizen	11669, 11671, 11672, 11935
Coby	12017
CyberHome	10794
Dell	11264, 11080, 11178
Digital Lifestyles	11765, 11822

## PLASMA TV'S

Dyne	11780
Element	11687
Emerson	11963
Emprex	11422, 11546, 11765
Envision	10813, 11365
Funai	10171
Go Video	10886, 11823, 11831
H & B	11366
Hanns.G	11783
Hannspree	11348, 11745, 11783
Hewlett Packard	11088
Hisense	11660
HP	11088
Hyundai	10849, 11219, 11294
I-Inc	11746
iLo	11286, 11603, 11684, 11990
Initial	11603, 11990
Insignia	11204, 11517, 11780, 12002
IX	10877
Jensen	11299
Konka	11831
Kost	11262
Kreisen	10876, 11474
LG	10856, 11178
Magnavox	11866, 10802, 11198, 11365, 11990
Maxent	11755, 11714, 11757
MB Quart	11868
Micro	11436
Mintek	11603, 11990
Mitsubishi	11250
NEC	11797, 12026
Niko	11581
Norcent	11365, 11591
Norwood Micro	11286, 11296
NuVision	11657
Olevia	11610, 11144, 11240
Philips	11483
Planar	11496
Polaroid	11262, 11276, 11316, 11341, 11538, 11687, 11762, 11766, 11767, 11769, 12063
Prima	11785
Protron	11320, 11323
Punet	11546
RCA	10047, 11781
RevolutionHD	11623
Runco	11629
Sampo	11755, 11597
Samsung	10812, 10766, 10814, 11575, 11632
Sansui	11409
Sceptre	10878, 11217, 11360, 11599
Scott	11711
Sharp	10093
Sherwood	11399
Signet	11262
Skyworth	11799
Solarisim	11220
Sole	11031, 11366, 11377, 11530, 11623, 12075, 12076
Sony	10000, 10011, 10273, 10353, 10834, 11317, 11400, 11685, 11786, 11791, 11904, 11925
Soundesign	10180, 10178, 10179, 10186
Sova	11320, 11952
Soyo	11546, 11746, 11824, 11826, 11828, 11830, 11831
Spectronicon	10003, 10137
Spectroniq	11687
Squareview	10171
SSS	10180, 10019
Starlite	10180
Studio Experience	10843
SunBrite	11420, 11435
Superscan	10093, 10864
Supre-Macy	10046
Supreme	10000
SVA	10748, 10587, 10768, 10865, 10871, 10872
Sylvania	11864, 10054, 10030, 10171, 10020, 10028, 10065, 10096, 11314, 11665, 11963
Symphonic	10180, 10171, 11904, 11913
Syntax	11610, 11144, 11240
Tatung	11286
Techview	10847, 12004
Toshiba	11343
TruTech	11723
Ultra	11323
US Logic	11264, 11080, 11178
Venturer	11865

## ADDITIONAL INFORMATION

The UEI Delta remote control does not have any user serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your remote control.

No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

All other product or service names are the property of their respective owners. Copyright Universal Electronics Inc., 2008.