

Voice Remote

powered by Google



1. **POWER** turns the TV on or off.

2. **MICROPHONE** for Voice Search.

3. **VOL** controls the volume on your TV.

4. **MUTE** turns the sound on or off.


5. **CONTROLLER** navigates using the **UP, DOWN, LEFT** or **RIGHT** areas.

6. **BACK** opens the main menu or returns to the previous screen.

7. **LAST** goes to the channel you last viewed.

8. **NETFLIX** launches the Netflix app.

9. **NUMBER BUTTONS** enter numbers (e.g., channel numbers or Parental Controls PIN).

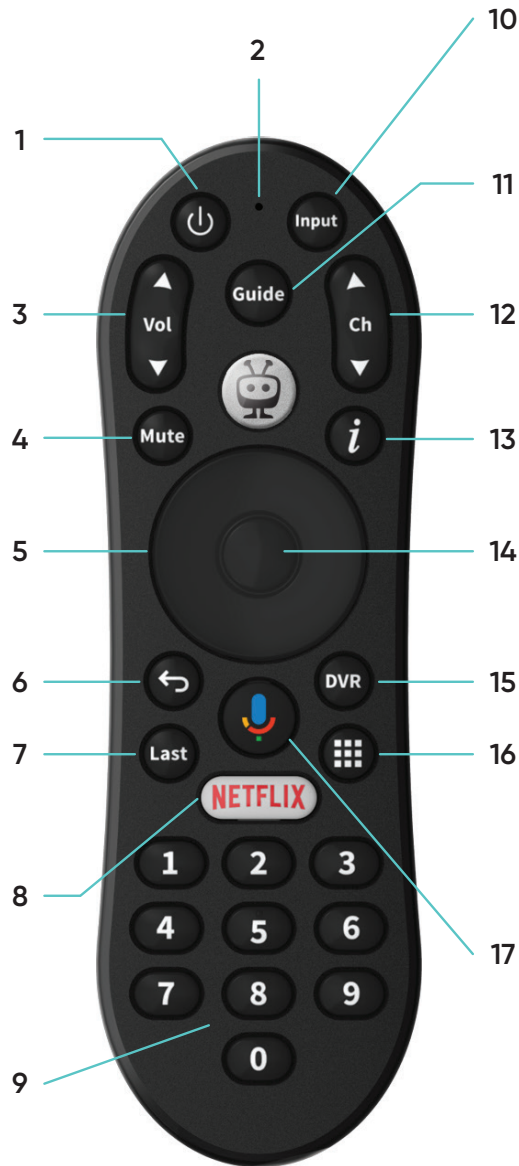

10. **INPUT** selects the input for your TV.

11. **GUIDE** takes you to the on-screen Guide.

12. **CH** changes the channels up and down.

13. **"i"** shows more information about what you're watching.

14. **OK**, in the center of the Controller, accepts the current selection.

15. **DVR** lets you schedule and access your recordings.

16. **APPS** takes you to all your apps.

17. **VOICE SEARCH** finds your shows. On some remotes **VOICE SEARCH** looks like this.



Scan QR Code For
More SBB TV Information
or Visit summitbb.com/support