















 
## GUIDE SYMBOLS

Below are some of the symbols that will help you operate the Guide and control your TV viewing.

-  Favorite channel
-  Broadcast in high-definition format
-  New episode
-  Skipped channel
-  Program locked by channel, rating, content advisory level or time period when Parental Control is currently enabled
-  Program unlocked by channel, rating, content advisory level or time period when Parental Control is currently disabled
-  VCR timer for a single event recording
-  VCR timer for multiple event recordings
-  Suspended timer or suspended PPV purchase
-  Reminder timer
-  Program broadcast with stereo sound
-  Program features closed caption
-  Program features a secondary audio track
-  Purchased PPV program

## PARENTAL CONTROL

Parental Control lets you block viewing and purchases of TV programs and movies, as well as recorded shows, based on your viewing preferences. You can also hide adult titles from being displayed on screen. From the Parental Control Menu, you can set locks by Rating, Content, Channel or Time.

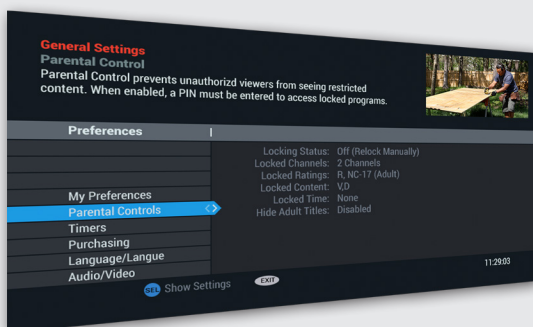


## SETTINGS



Set your favorite channels, timers, parental controls and more. Watch TV the way you want to. Press MENU twice on your remote to access General Settings. This section gives you all the information you need to personalize your viewing experience from the General Settings Menu.

## REMOTE CONTROL FEATURES

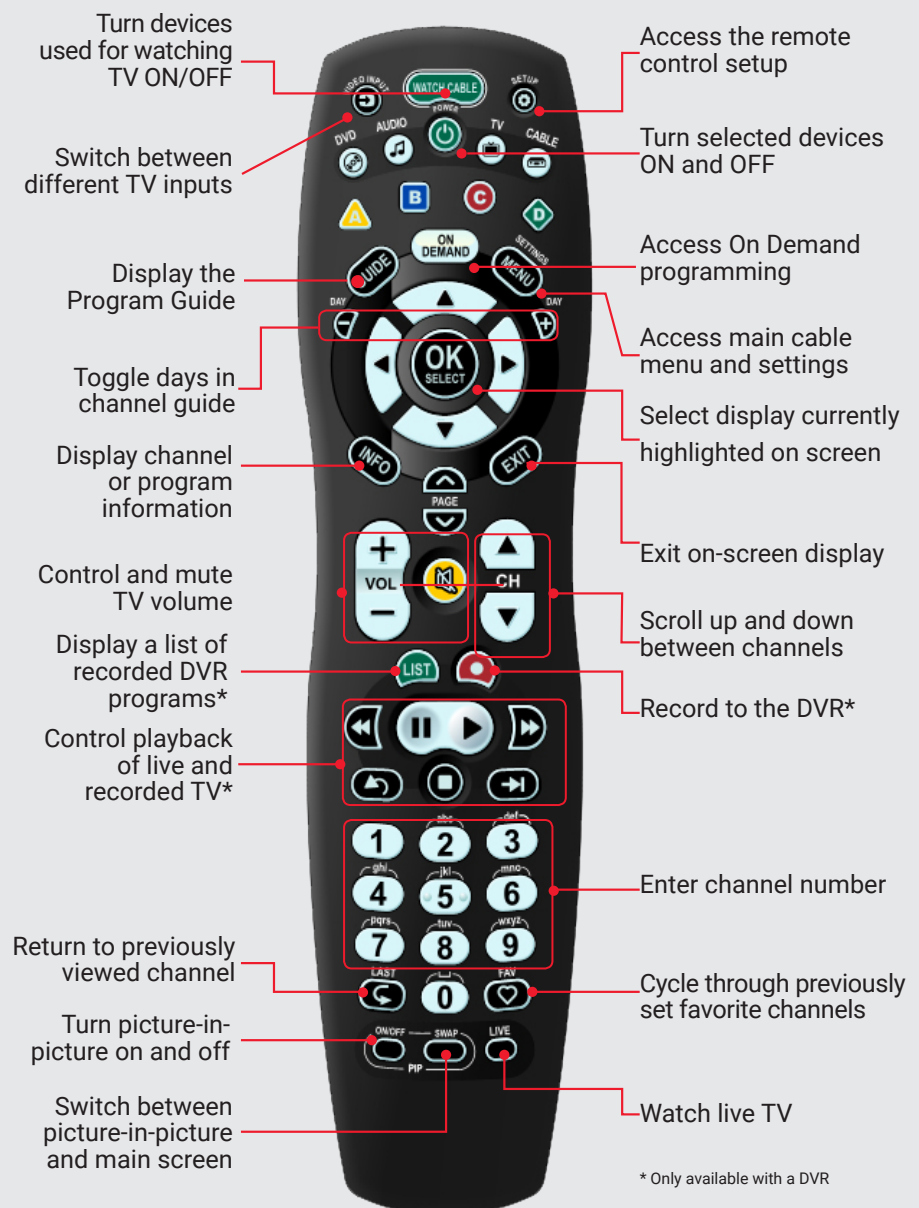

\* Only available with a DVR

## GUIDE BANNERS

**Guide Banners** provide quick programming information and even give you the freedom to browse other shows without leaving the program you are currently watching.



The **Channel Banner** displays when you change channels. It also shows current time, channel, program title, rating and other symbols, such as **R**, which indicates a recording is in progress.




Press **INFO** to display the **Info Banner** and to see what is available in the recording buffer.



Press **INFO** twice to display the **QuickInfo Banner** for a brief program description, rating and time. Press **◀ ▶** to browse programs by time and **▲ ▼** to browse other channels. Press **SELECT/OK** to tune, set a recording or reminder or to see upcoming episodes.

## CUSTOMIZED VIEWS


Sorting channels makes it easy for you to personalize your Guide. You can choose to list channels by Favorites, HD, All or create up to three Custom Lists.

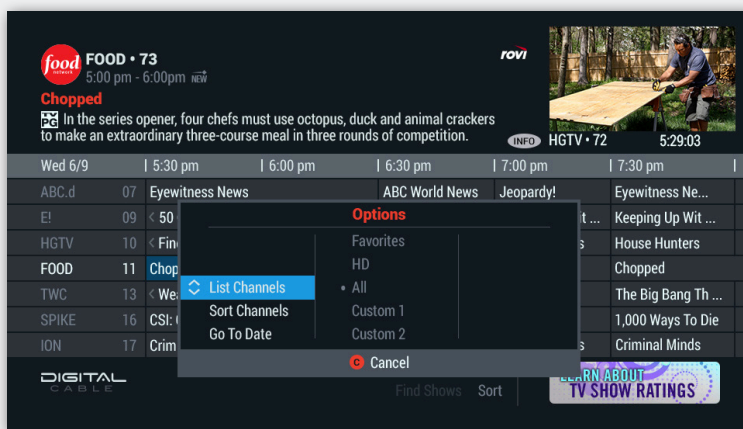

### List Channels


From the Guide, Press **A** to sort and display channels based on your preferences. Select List Channels to change your grid view to Favorites, HD, All Channels or one of three Custom Lists. Press **SELECT/OK** and a dot will appear next to your choice. The Guide will automatically list only those channels.

**HDTV** will appear on the Grid Screen when the "Use Always" selection is made for a Custom List.

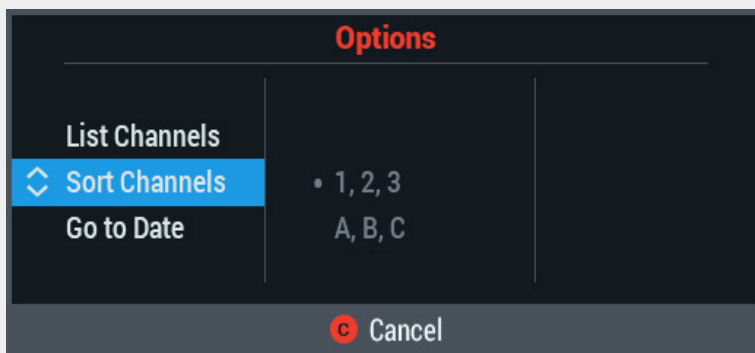

### Sort Channels

 Press **A** and select Sort Channels to sort alphabetically or numerically. The channel list will automatically sort according to your selection.

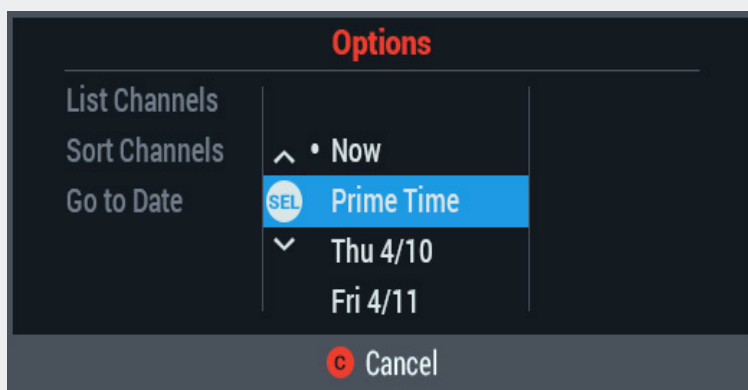

### Go to Date

From the **Time Grid**, Press **A**, then Go To Date to jump to Prime Time listings or to listings for a specific day in the future.